RAND McNALLY

intelliroute® TND™ 700

Quick Start Guide

Overview

See safety information included with the device for warnings and precautions.

NOTE: To maximize battery life, plug in and charge the navigation unit for the first two hours of use.

NOTE: Use the Reset button (located on the back of the device) to restore factory settings and restart the device.

Battery Power Indicator

Bright Red: Device is plugged in and the battery is charging.

Bright Green: Device is plugged in and the battery is fully charged.

Light Green: Device is in Standby Mode.

To Power the Device:

On Press and hold the Power Key for two seconds. (Device powers on in five seconds.)

Off Press and hold the Power Key for five seconds.

To Enter or Return from Standby Mode:

Press and release the Power Key.

Main Menu

1. Enter truck information and access truck-specific use tools
2. Show location on the map and view navigation instructions
3. Change driver status
4. Choose a destination
5. Select TND and route preferences
6. Mute the speaker
7. Adjust speaker volume
8. GPS Signal Indicator

Install the Mount

Note: Follow all local regulations governing the placement of the mount.

Select an area with a line of sight to the sky and GPS satellites to ensure reliable GPS information.

1. Clean and dry the mounting area.
2. Remove the suction cup protective film.
3. Adjust the angle of the mount using the thumbscrew and slide the mount into the cradle.
4. Pull the suction cup lever up to release suction.
5. Place and hold the mount suction cup against the mounting surface.
6. Press the suction cup lever down until it snaps into place.
7. Angle the bottom of the TND device into the cradle and align the two slots on the bottom of the device into the two ridges on the cradle.
8. Press the top of the device toward the cradle until you hear the upper clip latch into place.

9. Plug the power cord into the device and the vehicle's 12-volt power source.
10. Adjust the navigation device so that it can be easily seen and does not block the driver's line of sight.

Note: Do not place the mount in an airbag deployment area.

Enter Truck Information

1. Tap **Truck Tools** > **Truck Info**.

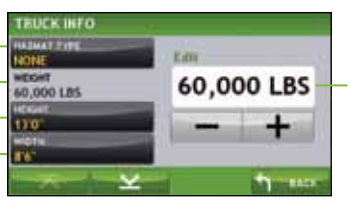

2. Tap and to view all options.
3. Tap the option button to be changed.
4. Enter new truck information settings.
5. Tap **Back** to save changes.

View Timers and Logs

Countdown timers are controlled by the Driver Status (**Driving**, **On Duty**, or **Off Duty)** selected on the Main Menu.

1. Tap **Truck Tools** > **Timers and Logs**
2. Tap the **Timers** tab to view timers, odometer readings, and times.

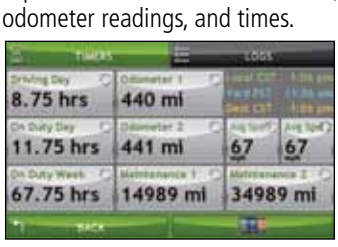

3. Tap the **Logs** tab to view a list of states.

4. Tap on a state to view individual logs.

Find an Address

1. Tap **Choose Destination** > **New Location.**
2. Select a search type (**Address**, **City Center** or **Intersection**).
3. Use the keyboard to type location information.

4. Tap on the address in the displayed list.

Find a Point of Interest (POI)

1. Tap **Choose Destination** > **Points of Interest**.
2. Select a search type (**My Truck**, **City**, **My Route End of Day**, or **Destination**).
3. Select a category and subcategory.
4. Tap on the Point of Interest in the displayed list.

Confirm Destination Window

1. Destination address.
2. Begin route to destination.
3. Cross reference to printed Rand McNally *Motor Carriers' Road Atlas*.
4. Return to previous window.
5. View the map.
6. Set Origin – change the starting address for a route to the location displayed on the map screen.
7. Return to Main Menu.
8. Save the location to the Address Book.
9. Add the location to a multi-stop route.

Route to a Saved Location

1. Tap **Choose Destination** > **Address Book**.
2. Tap on the **All Addresses** tab.
3. Tap on the destination in the displayed list.

4. Tap **Begin Route**.

Find a Point of Interest Amenity

Find truck-related points of interest.

1. Tap **Choose Destination** > **Points of Interest**.
2. Choose how you want to search for points of interest.
3. Tap to select the type of Points of Interest that you are looking for.
4. Tap on the amenity in the displayed list.

Route Map Window

1. Repeat spoken next-maneuver instructions.
2. Name of street you will turn onto next.
3. Show altitude, arrival time, remaining time, or local time.
4. Directions list slideout.
5. Zoom in/zoom out.
6. Current speed
7. Additional current location or route options.
8. Tap to view current road name, upcoming cross road name, or city name and state.
9. Select a map display option (**North Up, Direction Up**, or **3D View**).
10. Return to Main Menu.

Set Routing and Device Options

1. Tap **Preferences**.
2. Tap the **Routing Settings** tab.

3. Tap and to view routing options.
4. Tap the option button to be changed.
5. Enter the new settings for the option.
6. Tap **Back** to save changes.
7. Tap the **Device Settings** tab.
8. Tap and to view device options.
9. Tap the option button to be changed.
10. Enter the new settings for the option.

11. Tap **Back** to save changes.

Set Warnings

1. Tap **Truck Tools** > **Warnings**.

2. Tap and to view all warning options.
3. Tap the option button to be changed.
4. Enter the new settings for the option.
5. Tap **Back** to save changes.

IMPORTANT! Use TND Dock

Use Rand McNally TND Dock to register your device and to receive software upgrades, construction updates and access additional features.

NOTE: Features require internet connection and Windows compatible PC.

1. Turn on your TND and allow it to power up.
2. Connect your TND to your computer using the USB cable.

700TNQS10R0

On the computer:

3. Click **Install Rand McNally TND Dock using the program provided on the device**.

4. Click **View License Agreement**, then click **Accept**
5. Follow on-screen instructions to complete installation.

Find More Information

Once installed, the Rand McNally IntelliRoute TND 700 User Guide can be accessed from a button in TND Dock.

The User Guide and a list of FAQs can also be found at **www.randmcnally.com/truckgps.**

Or you can call **877-IGO4TND (877-446-4863)**